



PORTAUTENSILE PER STOZZATRICE

PHZ

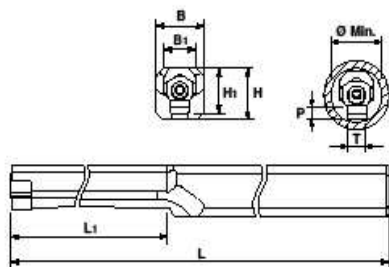

REFERIMENTO	H	H ₁	B	B ₁	L ₁	L	T	Ø min.	P max.		
PHZ 1104-08	11,2	9	11,3	8,5	25	160	3	9,5	1,6	DVF 2593	TX 207PLUS
PHZ 1107-08	11,2	10	11,3	7	80	200	4 5	10,9 11,1	2,5 2	DVF 2593	TX 207PLUS
PHZ 1111-08	11,2	12	11,3	-	80	200	4 5	14 14	2,5 2	DVF 2593	TX 207PLUS
PHZ 1612-10	15,5	16,2	12	-	-	220	6 8	17,8 18,2	4,2 5,2	DVF 2260	TX 207PLUS
PHZ 2014-13	20,6	21,5	14	-	-	250	10 12	24,2 24,7	6,2 7,2	5513 020-14	TX 207PLUS



HZ

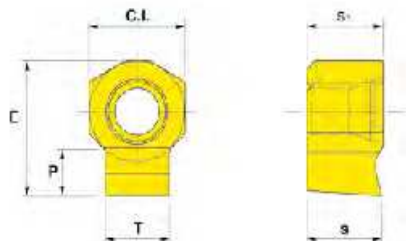

REFERIMENTO	C.L.	S	S ₁	L	P	T	Tolleranze su T
HZ 06 04- 30 C11	6	4,66	4,76	7,5	1,6	3	+0,020 -0,010
HZ 06 04- 40 C11	6	4,66	4,76	8,0	2,5	4	+0,020 -0,010
HZ 06 04- 60 C11	6	4,66	4,76	8,0	3,0	5	+0,020 -0,010
HZ 10 06- 80 C11	10	6,25	6,35	13,5	4,2	6	+0,020 -0,010
HZ 10 06- 90 C11	10	6,25	6,35	13,5	5,2	8	+0,020 -0,010
HZ 13 06-100 C11	13	9,40	9,525	18,5	6,2	10	+0,020 -0,010
HZ 13 06-120 C11	13	9,40	9,525	18,5	7,2	12	+0,020 -0,010
HZ 06 04- 30 H7	6	4,66	4,76	7,5	1,6	3	+0,018 -0,010
HZ 06 04- 40 H7	6	4,66	4,76	8,0	2,5	4	+0,018 -0,010
HZ 06 04- 60 H7	6	4,66	4,76	8,0	3,0	5	+0,018 -0,010
HZ 10 06- 80 H7	10	6,25	6,35	13,5	4,2	6	+0,018 -0,010
HZ 10 06- 90 H7	10	6,25	6,35	13,5	5,2	8	+0,018 -0,010
HZ 13 06-100 H7	13	9,40	9,525	18,5	6,2	10	+0,018 -0,010
HZ 13 06-120 H7	13	9,40	9,525	18,5	7,2	12	+0,018 -0,010

UTENSILI E INSERTI PER STOZZATRICE


PHZ/2

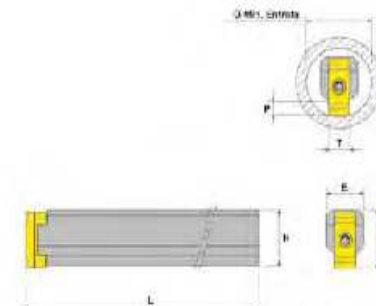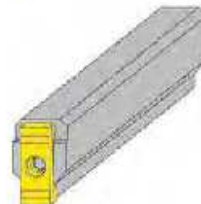

REFERIMENTO	H	H ₁	B	L	T	Ø min.	P max.		
PHZ /2 3825-14	38	37,5	25	300	14 16	44	8 9	5513 020-14	TX 225PLUS

HZ/2

Inserti a due taglianti

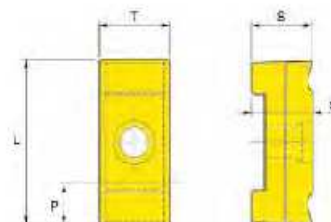

REFERIMENTO	S	S ₁	L	P	T	Tolleranze su T
HZ/2 14-14 C11	13,9	14	36	8	14	+0,205 -0,056
HZ/2 16-16 C11	13,9	14	36	9	16	+0,205 -0,056
HZ/2 14-14 H7	13,9	14	36	8	14	+0,018 -0
HZ/2 16-16 H7	13,9	14	36	9	16	+0,018 -0

Torrette, portautensili e utensili da tornio, stozzatrice e limatrice

Torrette, portautensili e utensili da tornio, stozzatrice e limatrice